



Using a Sony Digital Camera With a Floppy Disk

CAMERA BACK

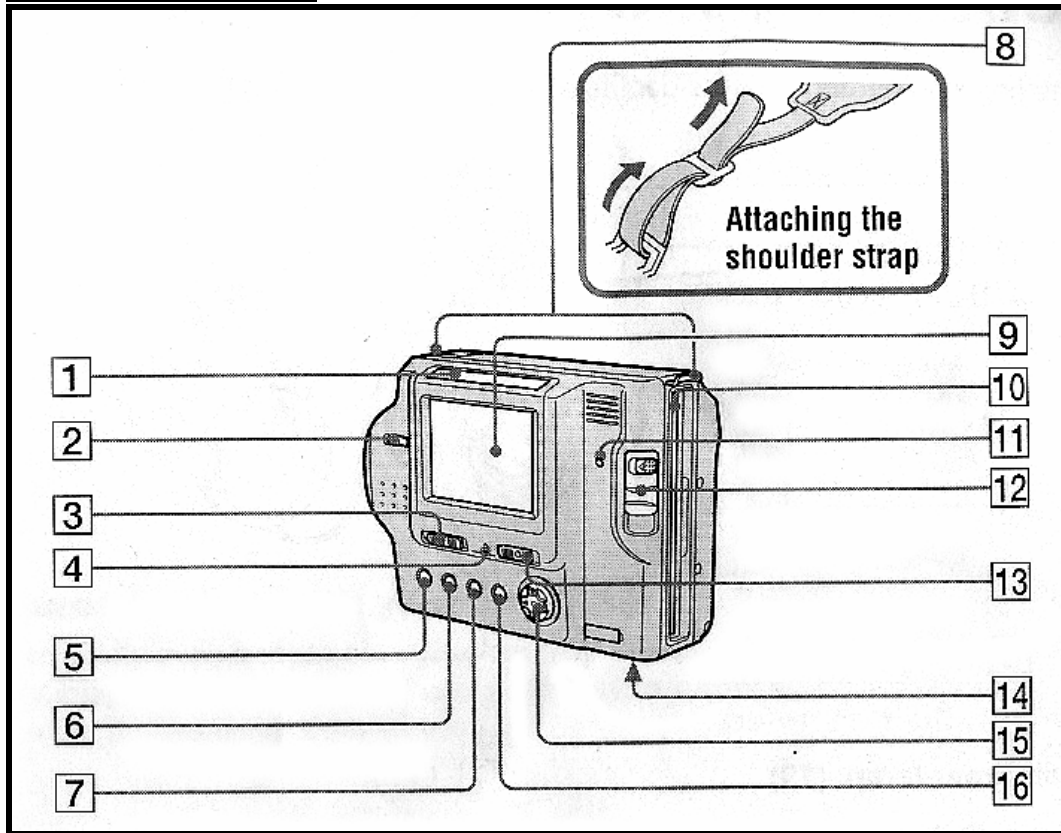

1. Photocell windows for LCD screen (with sunlight)
2. LCD BACKLIGHT switch
3. PLAY/STILL selector
4. POWER ON/OFF
5. Flash button/Flash lamp ⚡
6. FOCUS button
7. PROGRAM AE button
8. Hooks for strap
9. LCD screen
10. Floppy disk slot
11. Access lamp
12. DISK EJECT lever
13. POWER switch
14. Battery cover
15. Control button
16. DISPLAY button

CAMERA FRONT

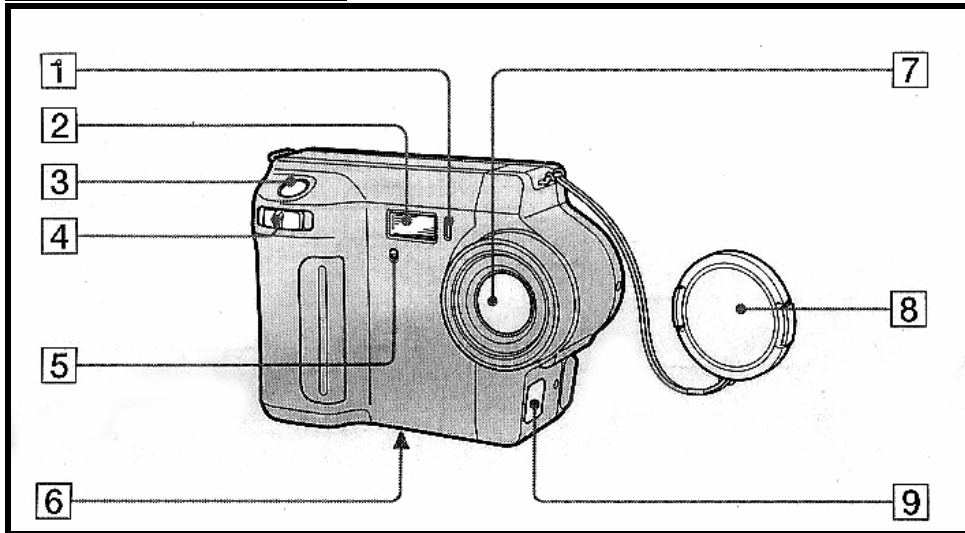

1. Self-timer lamp
2. Flash
3. Shutter button
4. Zoom lever
5. Photocell windows for flash
6. Tripod receptacle (on bottom)
7. Lens
8. Lens cap
9. DC IN cover/DC IN jack (for plugging into electrical outlet for charging)

ENLARGEMENT OF CONTROL BUTTON



Use arrow buttons to travel through menus or pictures.
Click on the center circle to "OK" or verify a decision, similar to using "Enter" on a computer keyboard.

SET DATE AND TIME

If the date and time are not set for the camera, the CLOCK SET screen appears when you turn on your camera.

Turn the camera on by sliding the POWER switch (BACK 13) to the right. The POWER ON/OFF (BACK 4) light should be green.

On the Control Button:

1. Press the up arrow.
2. Press the right arrow until you are at SETUP. Press center circle.
3. Press up arrow until you select CLOCK SET. Press center circle.
4. Press up arrow to get to Y/M/D, etc. Choose selection. Use up, down, left, & right arrows to set time.
5. When finished, stop on Enter button. Press center circle.
6. Press down arrow until menu is off screen.

LCD SCREEN

To take pictures, look through the LCD Screen (BACK 9). You also use the LCD screen to set Menu functions & to view pictures.

To save the battery, set the LCD BACKLIGHT (BACK 2) to OFF. Set LCD BACKLIGHT to ON when taking pictures or viewing them.

To adjust the brightness of the LCD Screen, change the setting.

On the Control Button:


1. Press the up arrow.
2. Press the right arrow until you are at SETUP. Press center circle.
3. Press up arrow until you select LCD BRIGHT. Press right arrow.
4. Press up arrow to get to the plus/minus buttons. Use the right and left buttons to adjust the brightness. More bars mean brighter.
5. Press the down arrow to get to the RETURN button. Press the center circle.
6. Press down arrow until menu is off screen.

SHUT OFF DIGITAL ZOOM AND USING ZOOM LEVER

To avoid grainy pictures, shut off the digital zoom. (Digital zoom isn't really a lens zooming in for closer pictures. It is software in the camera which "guesses" about what a closer picture would look like.)

1. Set the PLAY/STILL selector (BACK 3) to STILL.
2. Press the right arrow until you are at CAMERA. Press center circle.
3. Press up arrow until you select DIGITAL ZOOM.

4. Press right arrow to see ON and OFF choices.
5. Select OFF. Press center circle.
6. Press down arrow until menu is off screen.

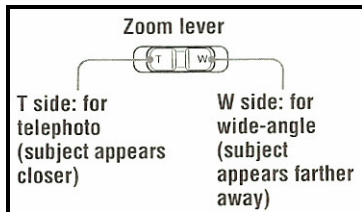

The zoom lever (FRONT 4) has a W side and a T side. You can use this button with the digital zoom off and still have zoom capabilities.

If you cannot get sharp focus on a close subject, use the W side and move closer until there is sharp focus.

Closest focal distance for W is around 10 inches, for T is around 24 inches.

SET IMAGE SIZE

There are guidelines for pictures relating to the pixel size and dimensions.

Megapixels per Picture	Dimension	Print Size
Less than 1 MP	640 X 480	Up to 2.3" X 3.5" prints. Good for web viewing or sending as email attachment
1 MP	1024 X 768	Up to 4" by 6" prints.
1.2 MP	1280 X 960	Up to 5" by 7" prints.
2 MP	1600 X 1200	Up to 8" by 10" prints
3-4 MP	2048 X 1536 & higher	Up to 11" by 14" prints.
5-8 MP	2592 X 1944 & higher	11" by 14" prints with near 35 mm photo quality in 5 MP range.

1. Set the PLAY/STILL selector (BACK 3) to PLAY.
2. Press the up arrow.
3. Press the right arrow until you are at TOOL. Press center circle.
4. Press the up arrow to get to RESIZE. Press the right arrow to see selections.
5. Use the up and down arrows to choose among 1280x960, 1024x768, or 640x480.
6. Press left arrow to get back to RESIZE.
7. Press down arrow until menu off screen.


RECORD THE TIME AND DATE ON A PICTURE

The date and time do not appear on the LCD screen. They can be seen during PLAY. They will show up on the image in red font on the screen or printed.

1. Set the PLAY/STILL selector (BACK 3) to STILL.
2. Use the control button to access menu.
3. Press the up arrow to select EFFECT.
4. Press the up arrow to select DATE/TIME. Press the right arrow to see the choices.
 - DAY & TIME adds date, hour, and minute.
 - DATE adds year, month, & day.
 - OFF doesn't add anything.
5. Press the up or down arrow to get to the correct option. Press the center circle.
6. Press down arrow until menu is off screen.

TAKE A PICTURE WITH AUTOMATIC SETTINGS

Recommended shooting distance is 1 foot to 8.33 feet. (12" to 100").

1. Put in a floppy disk, making sure that the camera is off.
2. Turn the camera on by sliding the POWER switch (BACK 13) to the right. The POWER ON/OFF (BACK 4) light should be green.
3. Set the PLAY/STILL selector (BACK 3) to STILL.
4. Press and hold the shutter button (FRONT 3) halfway down. The image has not been recorded yet.
5. On the LCD screen (BACK 9), the AE lock indicator (green circle on screen) is either flashing or still. If it is flashing, the camera is adjusting the focus & exposure. After the adjustment, the green circle is still.
6. Press the shutter button down the rest of the way.
7. Wait for the flash  (BACK 5) to charge, if necessary. The camera cannot record while the flash is being recharged.
8. The message "RECORDING" will appear on the the LCD screen.
9. When the "RECORDING" message disappears, the camera has finished capturing the image.

While the image is being recorded, the access lamp (BACK 11) is lit. During this time, do not shake or hit the camera, do not turn the camera off, or do not remove the battery pack or floppy disk. Otherwise your image and floppy disk may be unusable.

VIEWING PICTURES ON THE CAMERA

1. Set the PLAY/STILL selector (BACK 3) to PLAY.
2. The last image taken will be on the screen.
3. Use the control button to scroll through the pictures, right going forward and left going backward through the pictures.
4. To view 6 pictures at one time, use INDEX.
5. Use the up arrow to get to INDEX. Press the center circle.
6. Use the arrows to travel among pictures.
7. To access the next set of pictures, use the up/down arrows on the lower left of the screen. Up shows previous set and down shows next set.
8. To return to viewing one picture at a time, press the center circle.
9. Press down arrow until menu off screen.

DELETE PICTURES

1. Set the PLAY/STILL selector (BACK 3) to PLAY.
2. As you are viewing a single picture, press up arrow to get to menu.
3. Use right arrow to select DELETE. Press center circle.
4. If you do not want to DELETE the picture, press center circle at CANCEL.
5. Otherwise press up arrow to get to OK. Press center circle. You should see DISK ACCESS on the screen.

FORMAT DISK

1. Put in a floppy disk, making sure that the camera is off.
2. Turn the camera on by sliding the POWER switch (BACK 13) to the right. The POWER ON/OFF (BACK 4) light should be green.
3. Press the up arrow.
4. Press the right arrow until you are at FILE. Press center circle.
5. Press the up arrow until you are at DISK TOOL. Press right arrow.
6. Press the up arrow until you are at FORMAT. Press center circle.
7. If you do not want to FORMAT the disk, erasing all the files on the disk, press center circle at CANCEL.
8. Otherwise press up arrow to get to OK. Press center circle. You should see FORMATTING on the screen.
9. Press the down arrow until menu is off screen.